


## Refrigerator Models: All DRR, DRZ & DRW Models

### Triple Column Refrigerator Installation Instructions

Refer to the installation manuals supplied with the units for complete installation instructions.

#### Installation Preparation:


These instructions provide details which will allow Column Refrigeration models of any size (18", 24", 30" & 36"), utilizing custom panels only to be combined / paired together in arrangements as depicted below.

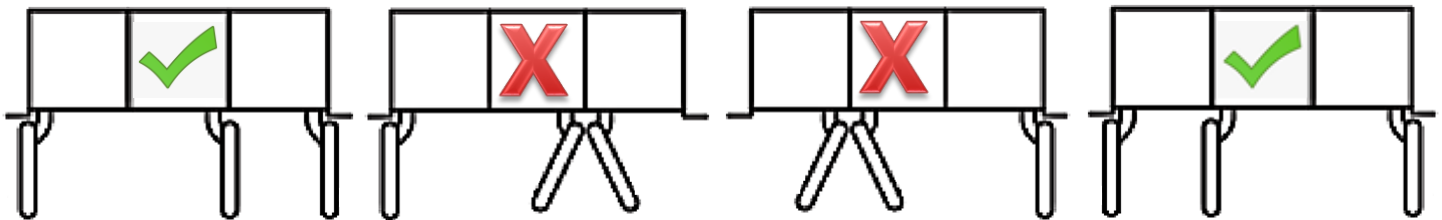

**Note:** Modernist style or handle-less door handle options are recommended for use in Trio installation configurations. Pro style door handles should not be used.

#### Installation Kit pt.# RAC00TCAAAA - Includes:

1. Installation Instructions
2. Upper Joining Bracket
3. Right Adjustable Bracket
4. Left Adjustable Bracket
5. Rear Joining Bracket

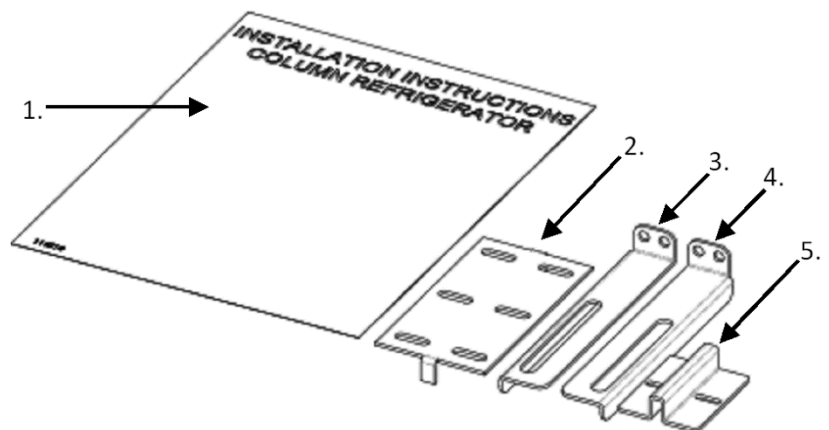

#### Additional Items Needed:

Dacor-Pairing Installation Kit pt.# RAC00CPAAAA (Qty. 2)


## Instructions:

### Cabinetry requirements

1. Confirm depth of cabinet opening.

Minimum cabinet depth 25"

If cabinetry depth is greater than 25" you will need to install an adjustable bracket (figure 1) to the top rear on each of the columns to prevent the joined units from potentially migrating backwards into the cabinetry opening at their union over time.

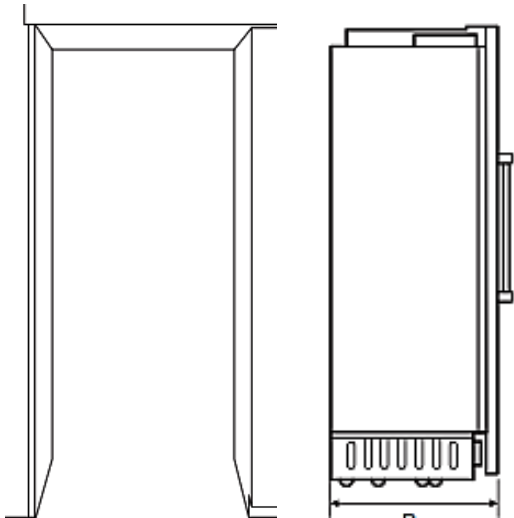

Cabinetry  
Depth Min. 25"

Unit Depth 25"



Figure 1.

2. On the adjoining side of each column refrigerator to be paired, remove the screw at the top rear corner. Set the removed screws aside for reuse in step 6.



3. Carefully roll the attached columns into the cabinetry opening after making sure that both units are plugged in. Slowly raise the units to the proper height by alternately raising the leveling legs bit by bit until proper height has been achieved.

4. Place the right adjustable bracket on the upper left corner of the column and place the left adjustable bracket on the upper right corner of the column.



5. Place the Upper Joining Bracket over the two adjustable brackets aligning the center holes of the Joining Bracket with the holes in each of the columns. Insert the two screws saved from step 3 and fasten the brackets together. Do not tighten the screws fully, allow screws to be just loose enough to let the two adjustable brackets to be able to slide backwards to brace against the back wall of the cabinetry opening (figures 3 & 4)



Figure 3.

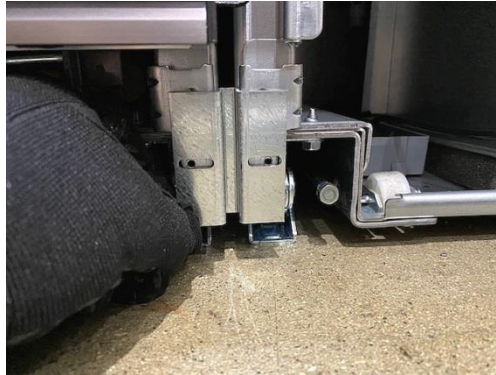


Figure 4.

6. Using screws supplied with the mounting kit secure the Left & Right Mounting Brackets to the back wall of the cabinetry opening (use wall anchors if securing brackets to Drywall).
7. Fully tighten the two screws left loose in step 6 to complete the mounting kit installation.
8. From in front of the units, remove the kick plates of each column.



9. Insert the Lower Front Joining Bracket so that it will attach behind the kick plates as shown.



10. One at a time, place the kick plates in front of the bracket and re-affix each in place with the original screws that held the kick plates in place.



11. Complete the rest of the column installation process as outlined in the unit's Installation Manuals.